



1 ASSEMBLY


Unpack the lawn mower ensuring all parts are present (see parts list overleaf) before discarding the packaging.

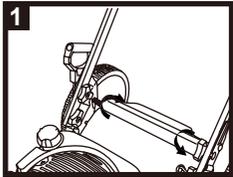


Align the lower handle with the holes in the deck. Make sure the holes in the lower handle are aligned with those in the support. Fix the lower handle onto the deck firmly.

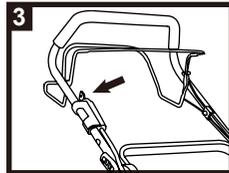

Make sure the key seat is on right hand side when you stand behind the mower.

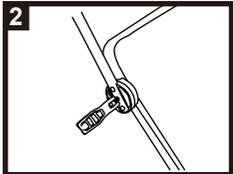


Lift the upper handle, and lock in place using the quick release lever and tensioning bolts that are attached to the handle. Ensure the lower and upper handles are firmly connected.

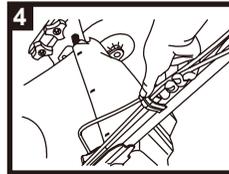


Ensure that the cables clips supplied are used to fix the cable to the lower handle.

3 MOWING THE LAWN


Fill the petrol tank with 1.0l of normal 95 Octane petrol (standard unleaded) using a funnel and measuring jug.

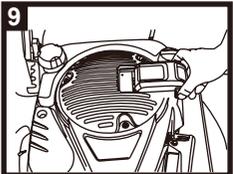

Fit the battery pack into the engine; a click confirms it is fitted correctly.

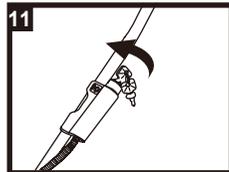

Turn the ignition key fully to the right. As soon as the motor starts running, release the key (it turns automatically).

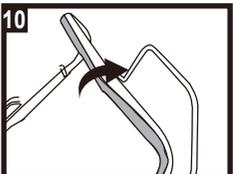


Hold the stop/start bar firmly to the upper handle. To stop the mower release the stop/start bar.


CAUTION!
Every start, ignition time should be less than 5s. Long time ignition will damage the electric motor. If no starting first time, please try 3~5 times.

2 PREPARING TO MOW


Follow these steps to ensure quick and easy set up every time.

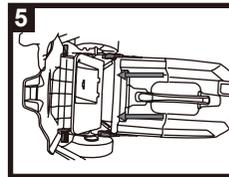

Assemble the grass collection bag and attach the lift handle onto the grass bag frame. When using the grass collection bag, please ensure the mulching plug is removed before hooking the bag onto the mower. Ensure the side discharge chute is not fitted when collecting the grass in the bag.

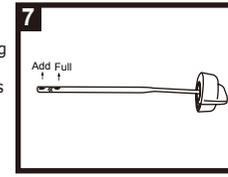

The engine does not come with oil. Add a minimum of 0.5 litres of oil. **CHECK THE OIL BEFORE EVERY USE.**

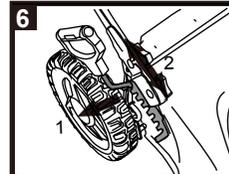

Pull the lever towards the wheel, then move it forward or backward to adjust the cutting height. Return lever into securing plate.



The battery pack is programmed to enter a "sleep mode". A quick charge of approximately 10 seconds is required to wake up the battery.

IMPORTANT INFORMATION!

Always read the instruction manual thoroughly before starting the lawnmower.



In cold weather it may be necessary to repeat the cold engine starting process.



Never allow the starter cord to snap back.



Check the oil level before every use. Always use high quality detergent oil classified SAE30 oil (or equivalent eg 5W 30, often termed as 4 Stroke lawn mower oil).

**If you have any difficulties please contact the helpline on 01904 727500
email support@gardenservicecentre.co.uk
or visit www.gardenservicecentre.co.uk**

53cm Key Start Self Propelled Petrol Lawnmower

QUALCAST

QUICK START GUIDE


**ALWAYS READ THE
INSTRUCTION MANUAL AND
SAFETY WARNINGS THOROUGHLY
BEFORE USE.**

For technical advice, spare parts and service support 7 days a week please call:

01904 727500

**Mon-Fri: 9am-5pm
Sat-Sun: 11am-4pm**

Email: support@gardenservicecentre.co.uk
Website: www.gardenservicecentre.co.uk

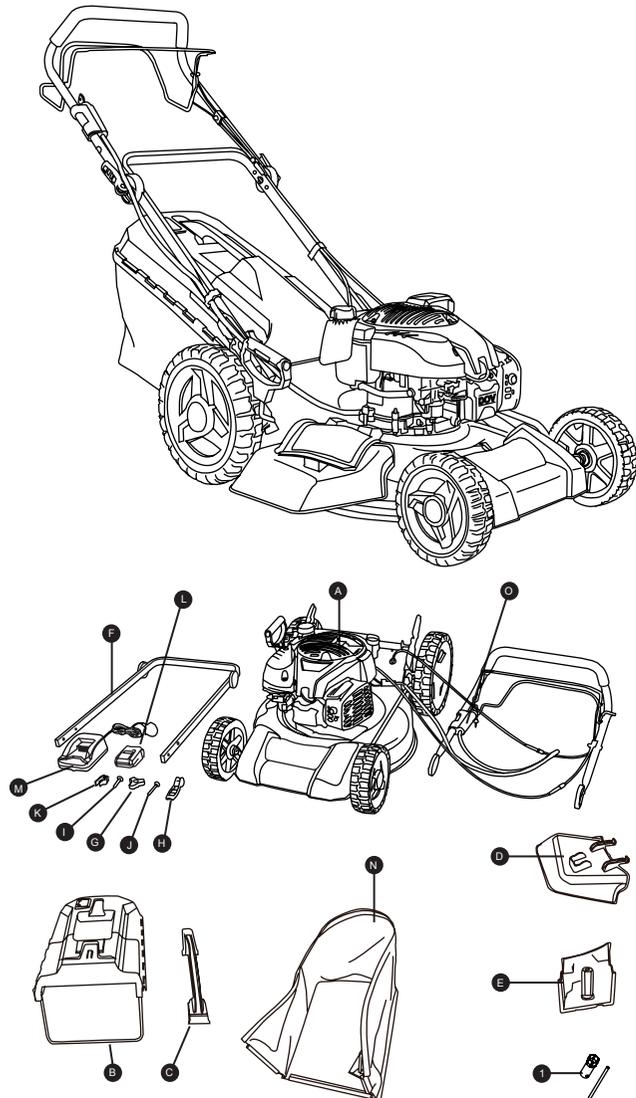

- A** Main mower deck (with upper handle)
- B** Grass collecting bag frame
- C** Grass bag lift handle
- D** Side discharge chute 1pc
- E** Plastic mulching plug 1pc (inside the mower)
- F** Lower handle
- G** Lower handle fixing knob 4pcs
- H** Quick release 2pcs
- I** Low handle fixing bolt M8x40 4pcs
- J** Quick release bolt M8x55 2pcs
- K** Cable clip 2pcs
- L** Battery pack
- M** Charger
- N** Collection bag
- O** Key seat with 2 keys
- 1** Socket spanner for spark plug 1pc