



1 ASSEMBLY


Unpack the lawn mower ensuring all parts are present (see parts list overleaf) before discarding the packaging.

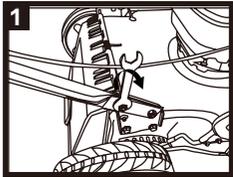


Set the height adjustment to lowest position; fix the lower handle onto deck firmly with supplied wrench using the handle fixing bolts.

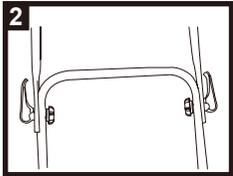

Lift the upper handle, align it with the lower handle, making sure the cables are not twisted, and fasten the two handles together by using the bolts and handle tension knobs.

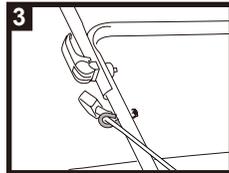


Make sure the rope guide is on right hand side when you stand behind the mower.

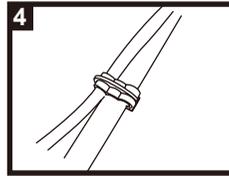


Using the cable clamp provided, secure the cables to the handle without trapping them.

3 MOWING THE LAWN


Fill the petrol tank with 0.8l of normal 95 Octane petrol (standard unleaded) using a funnel and measuring jug.

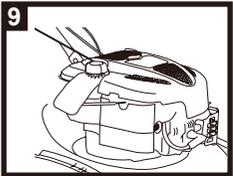

When starting a cold engine, press down the primer fully 3~5 times. When starting a warm engine, the primer does not need to be used.

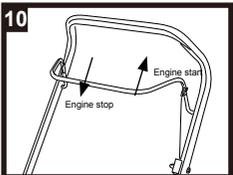

Hold the stop/start bar firmly to the handle to disengage the motor brake and automatic cut out.

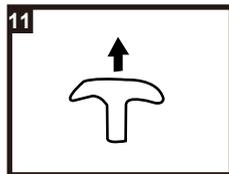


To start the engine slowly pull the start cord out until resistance is felt (approx 10-15cm) then start the engine with a sharp vigorous pull.

When the engine is ticking over ensure the throttle is in the rabbit position. ALL mowing must be done in the rabbit position.


To stop the mower release the stop/start bar.

2 PREPARING TO MOW

Follow these steps to ensure quick and easy set up every time.

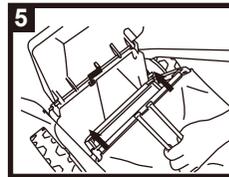


Firstly attach the grass bag to the frame by fixing all plastic hooks. Raise the safety flap, and hook the collection bag onto the mower. Release the safety flap.

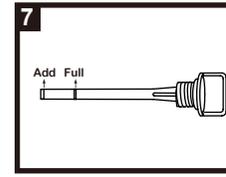

The engine does not come with oil. Add a minimum of 0.6 litres of oil. CHECK THE OIL BEFORE EVERY USE.



Pull the lever towards the wheel, then move it forward or backward to adjust the cutting height. Return lever into securing plate.

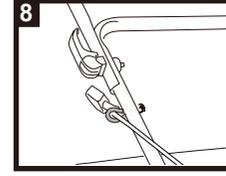

Slowly pull out starter cord & hook it through the eye of rope guide. You should ALWAYS start your mower from this position.

IMPORTANT INFORMATION!

Always read the instruction manual thoroughly before starting the lawnmower.



In cold weather it may be necessary to repeat the cold engine starting process.



Never allow the starter cord to snap back.



Check the oil level before every use.

If you have any difficulties please contact the helpline on 0845 034 2279
email support@gardenservicecentre.co.uk
or visit www.gardenservicecentre.co.uk

56cm Petrol Self Propelled Lawn Mower

QUALCAST

QUICK START GUIDE



**ALWAYS READ THE
INSTRUCTION MANUAL AND
SAFETY WARNINGS THOROUGHLY
BEFORE USE.**

For technical advice, spare parts and service support 7 days a week please call:

0845 034 2279

**Mon-Fri: 9am-5pm
Sat-Sun: 11am-4pm**

Email: support@gardenservicecentre.co.uk
Website: www.gardenservicecentre.co.uk

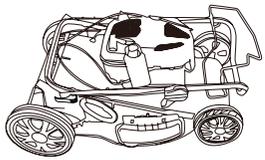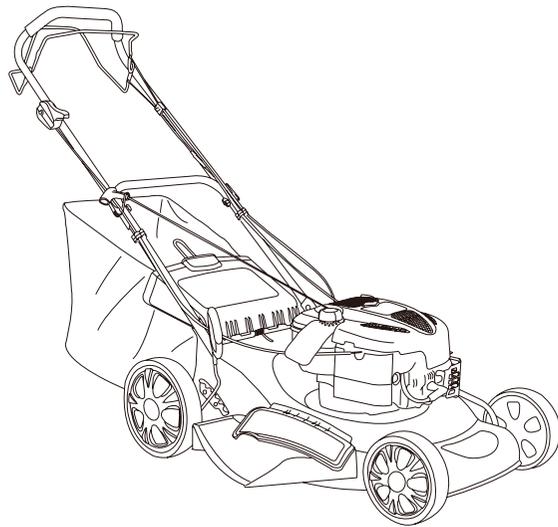

1



4



2



3



5



6



7

1. Main mower deck (with upper and lower handle)
2. Grass collecting bag 1pc
3. Side discharge chute 1pc
4. Plastic mulching plug 1pc (inside the mower)
5. Cable clip 2pcs
6. Socket spanner for spark plug 1pc
7. Wrench 1pc