


Parts list

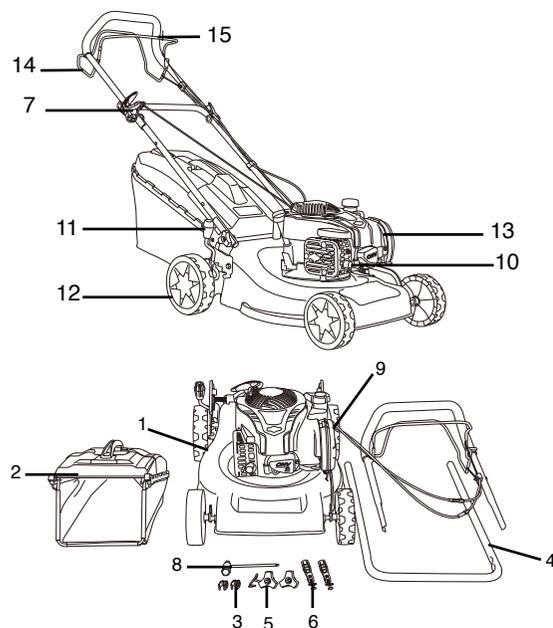

1. Main mower deck (with upperhandle)
2. Hybrid Collection box
3. Cable clip 2pc
4. Lower handle
5. Lower handle fixing knob with nut M8 2pcs
6. Quick release 2pcs
7. Rope guide 1pc (attached to the lower handle)
8. Socket spanner for sparkplug 1pc
9. Air Filter
10. Spark plug
11. Height adjustment
12. wheel x4
13. BS engine
14. Propulsion lever
15. Start/stop bar

You will also need 4 stroke oil, unleaded fuel and a funnel.

If there are any parts missing, please call the customer helpline on 0845 872 2740

Important Information

Always read the instruction manual thoroughly before starting the lawnmower.



In cold weather it may be necessary to repeat the cold engine starting process.



Never allow the starter cord to snap back.



Check the oil level before every use.



QUICK START GUIDE

46cm SP Petrol Lawnmower

Revision 1




ALWAYS READ THE MANUAL AND SAFETY WARNINGS THOROUGHLY BEFORE USE

If you have any questions or require spare parts, Core Service offers technical advice and support 7 days a week.

**Mon - Fri: 9am - 5pm
Sat - Sun: 11am - 4pm**

Email: support@coreservice.co.uk
Web: www.coreservice.co.uk


Assembly

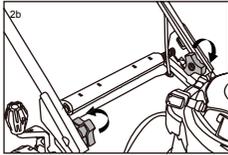


Fix the lower handle onto the deck firmly.
 Note: Make sure the rope guide is on the right handle, when you stand behind the mower.




Secure the lower handle bars (4) with the screws (4a) and tighten them with a proper crosshead screwdriver.

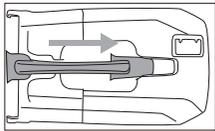

Assemble the Hybrid Collection box.

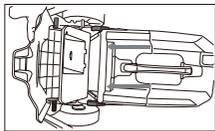


Raise the safety flap and hook the collection bag onto the mower. Release the safety flap.

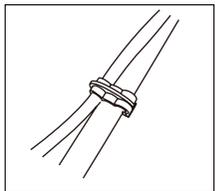


Fix the cable. Ensure that the cables clips supplied are used to fix the cable to the lower handle.

Preparation

STOP !!!
 Do not start the engine before adding oil to the engine!

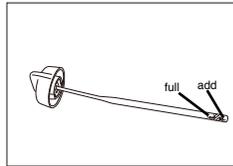

The engine does not come with oil. Add 0.5 litres of oil. Always check the oil level before using the machine.

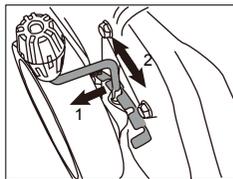

Pull the lever towards the wheel, then move it forward or backward to adjust the cutting height full stop. Move it to any one of the 7 positions (25~75mm) for the desired cutting height. Return lever into securing plate.

Operate

Starting the Engine

STOP/START-LEVER CLOSED	PULL STARTING-KNOB	PROPULSION-LEVER CLOSED
1	2	3

To stop the mower release the stop/startbar.