


IN THE BOX

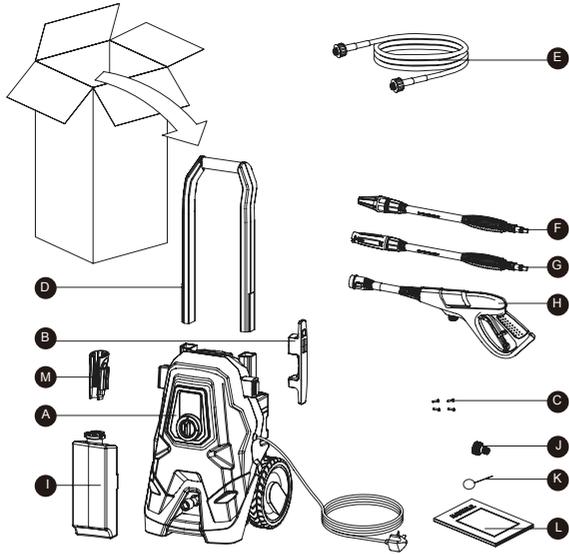

- A** High pressure washer
- B** Cable storage
- C** Screw
- D** Handle
- E** High pressure hose
- F** Turbo lance
- G** Adjustable spray lance
- H** Trigger gun
- I** Detergent bottle
- J** Water inlet male connector
- K** Nozzle pin
- L** Instruction manual
- M** Gun storage

PLEASE READ INSTRUCTION MANUAL FOR MORE DETAILS.

LACK OF PRESSURE?
REMOVE POSSIBLE AIRLOCKS!
RECONNECT WATER HOSE FOLLOWING INSTRUCTIONS

MCGREGOR

QUICK START GUIDE



McGregor 1800W HIGH PRESSURE WASHER






7368484 (Model: MPW1810)

**Important - Please read these
instructions fully before starting assembly**


These instructions contain important information that will help you get the best from your pressure washer, ensuring it is assembled correctly and safely. If you need help or have damaged or missing parts, call the Customer Helpline on **0345 605 2062**

**AFTER SALES SUPPORT
0345 605 2062**


1. ASSEMBLE

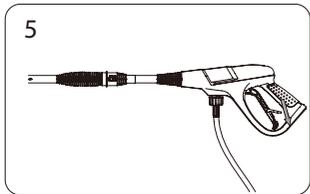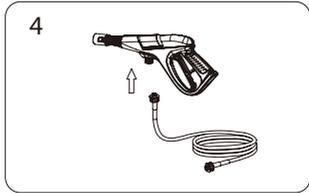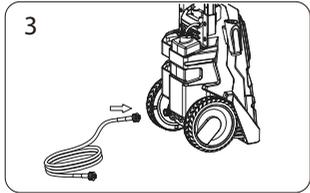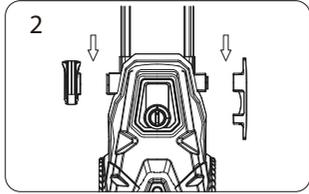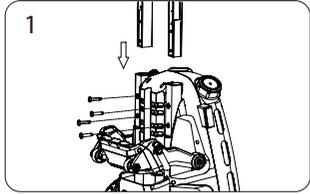


Insert the spray lance into spray gun, and twist 1/4 turn to lock in position. Check that it is firmly securely located in place.

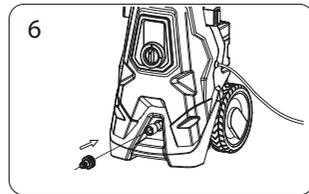


2. PREPARE

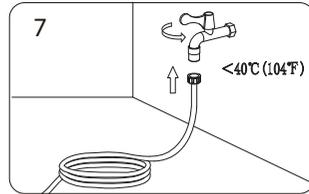


Install the inlet male connector, connect garden hose (non-supplied) and inlet connector, and turn the water on.

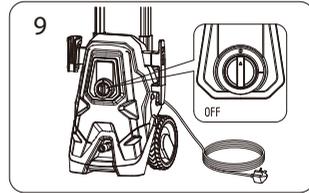


Makes sure the ON/OFF switch is in the OFF position.

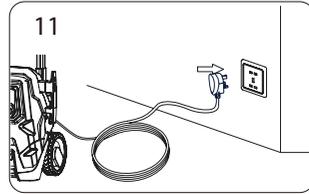

Connect to mains power. We recommend to use a RCD device.

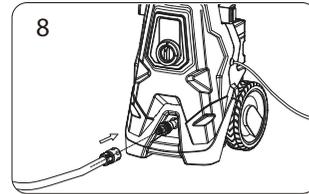


Connect garden hose and water supply. Let the water run through the hose.

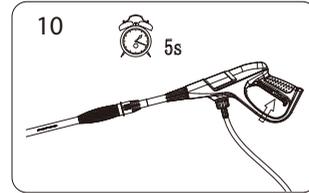


Unlock the safety trigger on the spray gun and press the trigger to pull the water through the machine, until a steady stream of water runs from the lance.


3. OPERATE

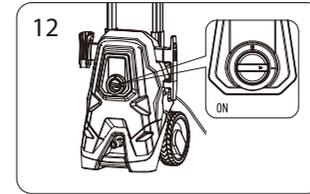


Power on the pressure washer.

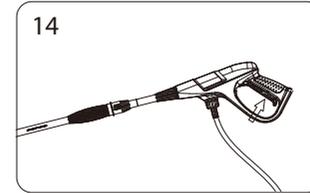


Pull the trigger on the spray gun to release a pressurized water spray.

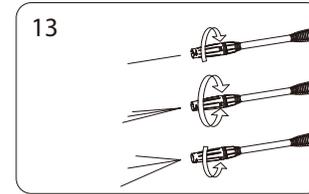

Jet spray adjustment is very aggressive. Do not adjust while spraying. Switch the machine off when interrupting your work for extended periods of time.

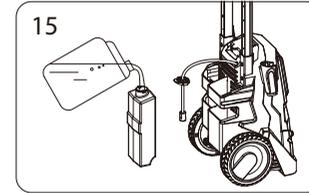

Special pressure washer detergents can be used to increase the cleaning power of the pressure washer.

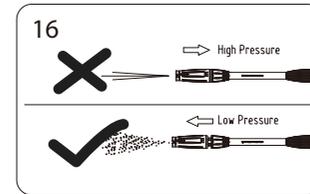

Detergent can only be used in combination with the adjustable spray lance in the low pressure setting. Detergent can't be used with turbo lance provided.