



1 ASSEMBLE


Unpack the lawn mower ensuring all parts are present (see parts list overleaf) before discarding the packaging.

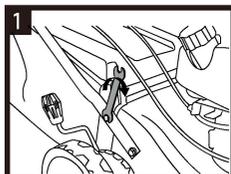


Align the lower handle with the holes in the deck. Fix the lower handle using the 4 handle fixing bolts onto the deck firmly with supplied wrench.

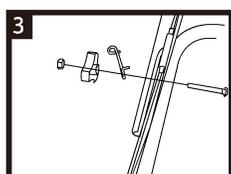

Locate the rope guide as the image showed, and secure using the plastic knob.

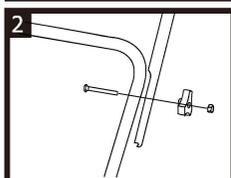


Locate upper handle bar on lower with the bolts. Secure the left bolt using plastic tightening knob ensuring cables are not twisted.

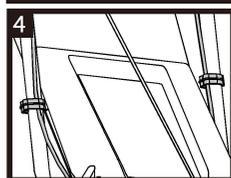


Using the cable clip provided, secure the cables to the handle without trapping them.

3 OPERATE


Fill the petrol tank with 0.9l of normal 95 Octane petrol (standard unleaded) using a funnel and measuring jug .

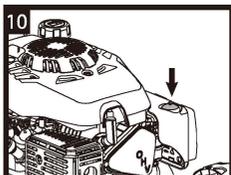


When starting a cold engine, press down the primer fully 3~5 times. When starting a warm engine, the primer does not need to be used.

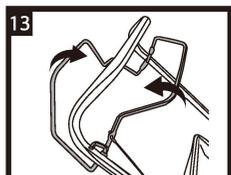


Keep a firm grip on the upper handle with stop/start bar and walk bar closed, and walk along with it self-propelling, never run with the mower.

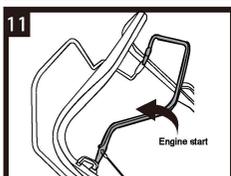

Hold the start bar firmly to the handle to keep the engine running.

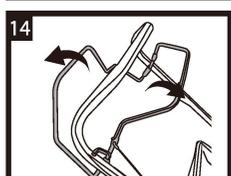


To stop the mower release the stop/start bar.

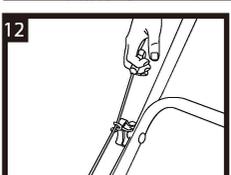


To start the engine slowly pull the start cord out until resistance is felt (approx 10-15cm) then start the engine with a sharp vigorous pull.

2 PREPARE

Follow these steps to ensure quick and easy set up every time.

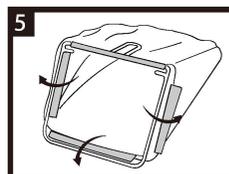


Attach the grass bag to the frame by fixing all plastic hooks.

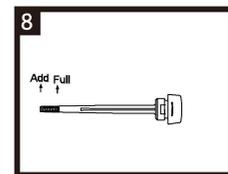


The engine does not come with oil. Add 0.4 litres oil (SAE 30).


CHECK THE OIL LEVEL BEFORE EVERY USE.

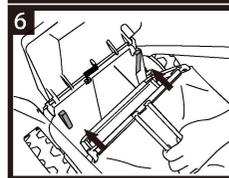

Lift the flap and hook the grass bag over the plastic hooks on the rear of the mower.

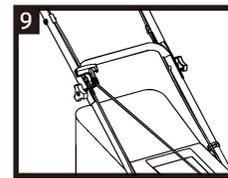

Slowly pull out starter cord & hook it through the eye of rope guide. You should ALWAYS start your mower from this position.

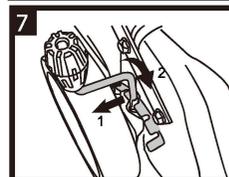

Adjust the cutting height via the height adjusting handle.

IMPORTANT INFORMATION!

Always read the instruction manual thoroughly before starting the lawnmower.



In cold weather it may be necessary to repeat the cold engine starting process.



Never allow the starter cord to snap back.



Check the oil level before every use. Always use high quality detergent oil classified SAE30 oil (or equivalent eg 5W 30, often termed as 4 Stroke lawn mower oil).

If you have any difficulties please contact the helpline on 0345 605 2062

IN THE BOX



1. Main mower deck (with upper handle attached)
2. Lower handle
3. Grass collection bag 1pc
4. Handle fixing bolts 4pcs
5. Handle tensioning knob with nut M8 2pcs
6. Cable clip 2pcs
7. Rope guide 1pc
8. Spanner 1pc
9. Wrench & philips screwdriver 1pc

MCGREGOR

QUICK START GUIDE



MCGREGOR 41CM PETROL SELF PROPELLED LAWNMOWER

7477052 (Model: XSZ41E)

Important - Please read these instructions fully before starting assembly

These instructions contain important information that will help you get the best from your mower, ensuring it is assembled correctly and safely. If you need help or have damaged or missing parts, call the Customer Helpline on 0345 605 2062

AFTER SALES SUPPORT
0345 605 2062