



SPEAR & JACKSON

ELECTRIC SILENT SHREDDER

2800W
SS2800

**ORIGINAL
INSTRUCTION
MANUAL**



AFTERSALES SERVICE
01904 727505
MON-FRI 9am-5pm SAT/SUN 11am-4pm
www.spearandjackson-power.com



Important - Please read these instructions fully before operating or maintaining your shredder

These instructions contain important information that will help you get the best from your shredder, protecting your power tool investment.

THANK YOU!

Dear Customer,

Thank you for choosing a Spear and Jackson shredder.

Spear and Jackson was founded in 1760 in the city of Sheffield, which is world famous for the production of steel, cutlery and garden and hand tools.

Through continuous innovation and the use of new technologies and materials, Spear and Jackson has gained an enviable reputation as a supplier of reliable, high performance and high quality products designed to make your work in the garden as easy and enjoyable as possible.

3 YEARS GUARANTEE

As a testament to the quality of our products, we offer a free extension of the standard 2 years manufacturer's warranty for all registered products. Simply register your product within 28 days of purchase via www.spearandjackson-power.com to extend the standard manufacturer's warranty by an additional 12 months. After registering your product, your garden power tool will be covered for parts and labour for 3 years from the date of purchase, subject to the terms of the warranty. If you do not register your product, it is important to retain your proof of purchase.

7 DAYS A WEEK TECHNICAL SUPPORT

We want you to get the best out of your products. Our easy-to-read instruction manual guides you with best practice use and maintenance tips. You can also visit www.spearandjackson-power.com for online help, general tips and useful videos about your garden product. However if you prefer to speak to one of technicians please call **01904 727505, Mon-Fri 9am-5pm and Sat/Sun 11am-4pm**, we can solve around 80% of questions directly over the phone.

We hope you enjoy your product and we look forward to any feedback, as this allows us to develop even better products for the future.

CONTENTS

Safety Information	04
Description of symbols	04
General safety	05
Personal safety	06
Operational safety	07
Maintenance and storage safety	08
Intended use	08
Box Content / Parts	09
Assembly	10
Unpacking	10
Handle assembly	10
Fix the cable retain relief	
Fix the cable	
Assemble the grass bag	10
Connection to the power supply	11
Operation	12
Setting cutting height	12
Connection to the power supply	13
Switching on	14
Switching off	15
General operation	16
Grass bag full indicator	16
Maintenance	17
Technical Data	20
Troubleshooting	21
Warranty	22
EC DECLARATION OF CONFORMITY	23

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

DESCRIPTION OF SYMBOLS

The following warning symbols appear throughout this manual and indicate the appropriate safety measures you should take when operating and maintaining the shredder.



WARNING!

This is a warning symbol. This symbol is used throughout the user guide whenever there is a risk of personal injury. Ensure that these warnings are read and understood at all times.

Read instruction handbook before operating this machine.



This symbol indicates the requirement of wearing ear.



Protection and eye protection when using the product.



Wear protective gloves



Keep bystanders away.



Keep hands and feet out of openings while machine is running.

Danger-rotating blades. Keep hands and feet out of openings while machine is running.



Do not expose to rain.



Always set the ON/OFF switch to OFF and pull the power plug out of the socket-outlet before doing any work on the shredder, e.g. cleaning the shredder and making adjustments, or if the power cable is entangled or damaged.



Explanation of the safety switch on the debris box: The switch is in the "Lock is closed" position: The shredded material debris box is locked. The shredder can be switched on. The switch is in the "Lock is open" position: The shredded material debris box is not locked and can be removed. The shredder cannot be switched on.



Explanation of the lever for adjusting the counter blade:



Turning clockwise reduces the distance between the cutting unit and the counter blade.

Turning counter-clockwise increases the distance between the cutting unit and the counter blade.



Do not step on the collection box.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

DESCRIPTION OF SYMBOLS

The following warning symbols appear throughout this manual and indicate the appropriate safety measures you should take when operating and maintaining the shredder.



Changeover switch: For a description of the changeover switch.



Cutting device continues to rotate after the product is switched off. Wait until all components have completely stopped before touching the unit.



Guaranteed sound power level value in 94 dB.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check your Local Authority or retailer for recycling advice.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

GENERAL SAFETY



IMPORTANT! Read all instructions.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term “power tool” in all warnings listed below refers to your mains operated power tool.

- **Read the instructions carefully.** Be familiar with the controls and the correct use of the appliance. Read and understand the operator’s manual and observe the warnings and instruction labels affixed to the appliance.
- **Users.** Never allow children or people unfamiliar with these instructions to use the appliance. Children is not allowed to use this machine. Local regulations may restrict the age of operator. Never operate the tool under the influence of alcohol, medication or drugs.
- **Use appropriate tool.** This device is only intended for compacting fibrous and wood-related materials such as hedge and tree cuttings, branches, bark and pine cones. This device is only designated for use on private property. Do not force small tools or attachments to do the job of a heavy duty tool.
- **Keep work areas clean.** Cluttered areas can cause accidents.
- **Consider work area environment.** Do not expose the tool to high humidity or rain. Do not use the tool in damp and wet conditions. Keep the work area well lit. Do not use the tool where there is a risk of causing fire or explosion, e.g. in the presence of flammable liquids and gases.
- **Keep all bystanders, children, and pets away.** Children must be supervised in order to ensure that they do not play with the machine. The operator or user is responsible for accidents or hazards occurring to other people or the property.
- **Dress appropriately.** Do not wear loose clothing, hair or jewelry, as these can be caught in moving parts. Preferably wear non-slip footwear when working outdoors. Wear protective hair covering to keep long hair out of the way.
- **Head protection.** Always use safety glasses and gloves. Use a face or dust mask whenever the operations may produce dust or flying particles. Wear ear protection whenever the sound level seems uncomfortable.
- **Do not overreach.** Keep proper footing and balance at all times.
- **Stay alert, watch what you are doing.** Use common sense when operating the appliance. Do not operate the tool when you are tired.
- Make sure that the material inserted into the shredder does not contain hard objects made of metal, stone, glass or similar.
- **Remove adjusting keys and wrenches.** Do not operate the shredder when you are tired or distracted, or under the influence of alcohol or medication. Always take a break when you need one and be sensible about how you work.
- **Risk of cut.** Before you start up the shredder, check that all of the nuts, bolts and other fastenings are tight. Covers must be fastened properly and in good working order. Replace any damaged or illegible stickers.
- Do not leave the shredder working unattended and keep it in a dry place out of children’s reach.
- **Check for damaged parts.** Before further

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

use, carefully check the tool for damage. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other condition that may affect its operation. Do not use the tool if any parts are damaged or defective. Have any damaged or defective parts repaired or replaced by an authorized service agent. Never attempt any repairs yourself.

- **Store idle tools.** When not in use, tools should be stored in a dry, locked-up place out of reach of children.
- **Maintain tools with care.** Keep tools clean and in good condition for better and safer performance. Follow the instructions for maintenance and changing accessories. Keep handles and switches dry, clean and free from oil and grease.
- **Have your tool repaired by an authorized service agent.** This tool is manufactured in accordance with the relevant safety regulations. To avoid danger, electrical appliances must only be repaired by qualified technicians.



WARNING!

Use only attachments or accessories recommended by the manufacturer of this tool.

The use of attachments or accessories not recommended can result in serious personal injury.

WORKPLACE SAFETY

- Ensure that the area you are working in is clean and well lit. Untidy or unlit workplaces can lead to accidents.
- Only use the shredder in the open (that is,

away from walls or other rigid structures) on a firm, level surface.

- Do not use the machine on a paved, gravelled area, which could be damaged by ejected material.

SAFETY TIPS FOR ELECTRONIC DEVICES

- The plug of the electrical tool must fit into the socket. The plug may not be modified in any way. Do not use an adapter plug in conjunction with a grounded electrical tool. Unmodified plugs and the appropriate sockets will reduce the risk of an electrical shock.
- Avoid body contact with grounded surfaces, for example, pipes, heating, ovens and fridges. There is an increased risk of electrical shock if your body is earthed.
- Keep the electrical tools away from rain or damp. Water entering an electrical device will increase the risk of an electrical shock.
- Damaged cables, coupling and plugs or connecting leads not corresponding to specifications, must not be employed. Remove the plug immediately from the plug socket in case of damage to the mains cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- When you use an electrical tool out in the open, use an extension cable that is designed for outside use. Damaged cables, coupling and plugs or connecting leads not

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

corresponding to specifications, must not be employed. Remove the plug immediately from the plug socket in case of damage to the mains cable.

- If it is not possible to avoid using the electrical tool in a damp environment, use a residual current circuit-breaker with a trigger current of 30 mA or lower. The use of a residual current circuit-breaker reduces the risk of an electrical shock.
- Arrange the connecting cable in such a way that it cannot be caught by branches or similar when cutting.
- Do not overload the device. Use the appropriate electrical tool for the job in hand.
- Using the correct electrical tool allows you to work better and more safely in the specified performance range.
- Do not use an electrical tool with a defective switch. An electrical tool that cannot be switched on or off is dangerous and must be repaired.
- Do not transport or tip the shredder with the motor running.
- Keep electrical tools that are not in use well out of the reach of children. Do not allow people who are unfamiliar with the device or who have not read these instructions to use the device.
- Electrical tools are dangerous if they are used by inexperienced persons.
- Switch the shredder off and pull the plug under the following circumstances:
 - When you are not using the device,
 - Transporting it or leaving it unattended;
 - Before releasing a jammed blade.
 - When you are checking the device, cleaning it or removing blockages;
 - When you are carrying out cleaning or maintenance work or replacing accessories;

- Before moving or lifting the shredder
- If foreign objects should enter the shredder, if the shredder is making unfamiliar noises or vibrations (check the shredder for damage before starting it up again).
- Ensure that your cutting tools are sharp and clean. Properly cared for cutting tools with sharp cutting edges are less likely to become jammed and are easier to operate.
- Use the electrical tool, accessories, adjustment tools etc. in accordance with these instructions. Take the working conditions and the tasks to be completed into account. The use of electrical tools for tasks other than the one they are intended for can lead to dangerous situations.

PERSONAL SAFETY

- Pay attention to what you are doing and be sensible when working with an electrical tool. Do not use an electrical tool if you are tired or under the influence of drugs, alcohol or prescription drugs. A single moment of inattention when using an electrical tool can lead to serious injuries.
- Wear personal protective gear and always wear goggles. Wearing personal protective clothing, such as breathing masks, non-slip safety shoes, protective helmet or ear defenders, according to type and use of the electrical tool, will reduce the risk of injuries.
- Avoid starting the tool accidentally. Ensure that the electrical tool is switched off before you connect it to the power supply and/or battery, or transport it. If you have your finger on the switch when moving the device or have it switched on when connecting to the power supply, this may lead to accidents.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

- Remove the adjusting tools or wrench before switching the electrical tool on. A tool or a wrench caught in a rotating part of the device may lead to injuries.
- Avoid abnormal body positions. Ensure that you are standing firmly, and keep your balance at all times.
- Keep hands, other body parts and clothing out of the filling chamber and ejection channel and away from other moving parts.
- In the event of blockages in the machine intake or ejection, switch off the motor and disconnect the machine from the mains before removing leftover material in the intake opening or ejection channel. Ensure that the motor is free of rubbish and other accumulations in order to safeguard the motor from damage or possible fire. Remember that the cutting tool is also activated when the starting mechanism is started on a motor operated machine.
- Do not reach into the funnel feeder during operation. The shredder will continue to run for a short period after you switch it off.
- Check all screws regularly to ensure that they sit tight.
- Conversions, independent modifications and the use of non-approved parts are not permitted.
- Only use original replacement parts. Only these replacement parts are designed and suitable for the device. Other replacement parts will not only lead to an invalidation of the guarantee, they may also endanger you and your environment. Always store the device in a dry location.
- If the machine is switched off for the purpose of maintenance, storage or to replace an accessory, ensure that the plug has been pulled from the socket. Ensure that all of the moving parts have come to a standstill and, if there is a key, remove it. Allow the machine to cool down before carrying out maintenance, adjustment work etc.
- Always allow the machine to cool down before storing.
- Never transport the unit with the engine running. Protect the device from becoming damaged during transportation.

SERVICE

- Only have your electrical tools repaired by qualified specialists and with original replacement parts. This ensures that the safety of the electrical tool is maintained.
- Before conducting any maintenance, make sure the device is unplugged (disconnect the power supply) and wait until the blade shaft is at a complete standstill. Allow the device to cool down before doing anything.
- Only those maintenance and fault elimination tasks described here may be carried out. Any other tasks must be completed by a specialist.

PREPARATION

- Before starting the machine, look into the feeding chamber to make certain, that it is empty.
- Keep proper balance and footing at all times. Do not over reach. Never stand at a higher level than the base of the machine, when feeding material into it.
- Always stand clear of the discharge zone when operating this machine.
- When feeding material into the machine be extremely careful that pieces of metal, rocks,

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

bottles, cans or other foreign objects are not included.

- If the cutting mechanism strikes any foreign objects or if the machine should start making any unusual noise or vibration, shut off the power source and allow the machine to stop, disconnect the plug from supply and take the following steps :
 - a) Inspect for damage.
 - b) Check for and tighten any loose parts
 - c) Have any damaged parts replaced or repaired with parts only supplied from original manufacture.
- Do not allow processed material to build up in the discharge zone ; this may prevent proper discharge can result kickback of material through the feed intake opening.
- Keep all guards and deflectors in place and in good working condition.
- Only switch the shredder off once the funnel feeder is completely empty since the shredder may otherwise clog up and not be able to start afterwards.
- Shut off the power source and disconnect the plug from the power supply whenever you leave the work area.
- Do not tilt the machine while the power source is running.
- Motor should be kept clean of debris and other accumulations.

- Disconnect the product from the power supply before carrying out maintenance or cleaning work. Use only the manufacturer's recommended replacement parts and accessories.
- Inspect and maintain the product regularly. Have the product repaired only by an authorised service centre or similar qualified specialist.
- When not in use, store the product out of the reach of children.
- Have your power tools serviced by a qualified repair person using only identical replacement parts. This will ensure that safety of the power tool is maintained.

INTENDED USE

This electric garden shredder is designed only for shredding organic garden waste. Place biologically degradable material, e.g. leaves, branches, dead flowers etc., into the loading funnel inlet.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Any use of the machine that deviates from its intended use and is not included in these instructions is considered unauthorized use and relieves the manufacturer from his or her legal liability.


MAINTENANCE AND STORAGE SAFETY

- Disconnect the product from the power supply and check for damage after use.

BOX CONTENT

PARTS

- | | | | |
|---|------------------------------|----|----------------|
| 1 | Feeding hopper | 9 | Wheel |
| 2 | Handle | 10 | Wheel cover |
| 3 | Safety switch | 11 | Support foot |
| 4 | On/Off switch | 12 | Back cover |
| 5 | Forward/Reverse switch | 13 | Collection box |
| 6 | Counter blade adjusting knob | 14 | Push stick |
| 7 | Plug | 15 | Spanner |
| 8 | Collection box lock button | 16 | Allen wrench |

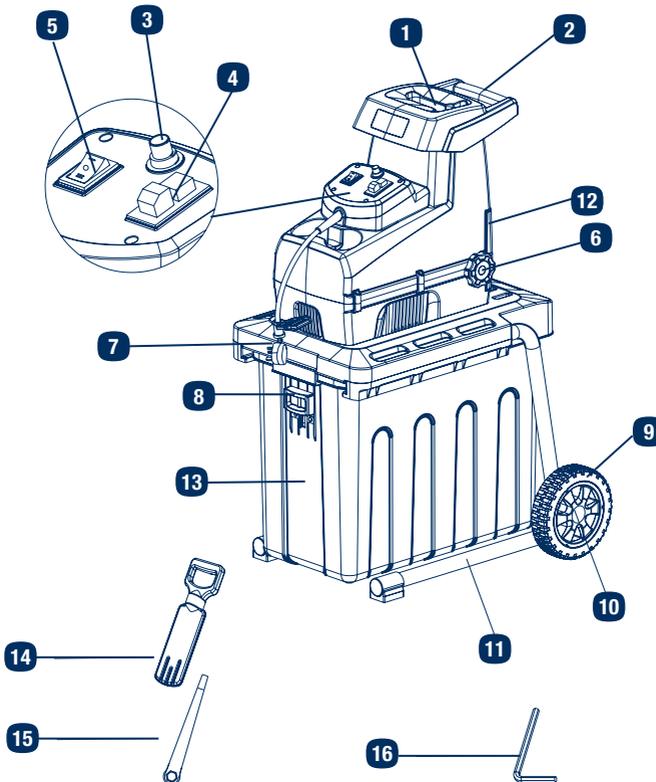

If there are any parts missing, please call the customer helpline on 01904 727505


ASSEMBLY

1 Unpacking


- i. Unpack all parts and lay them on a flat, stable surface.
- ii. Remove all packing materials.
- iii. Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact the aftersales service within 28 days of purchase. Using an incomplete or damaged product represents a hazard to people and property.
- iv. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

2 Assemble the wheel

- i. Turn the shredder upside down and pivot the legs upward.

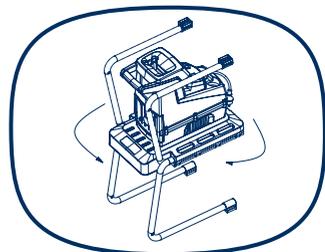


- ii. Place the supplied wheel axle (A) through the respective openings.
- iii. Put the supplied washer (B) and sleeve (C) onto the wheel axle.
- iv. Place the wheels (D) and install the nut hand tight (E).

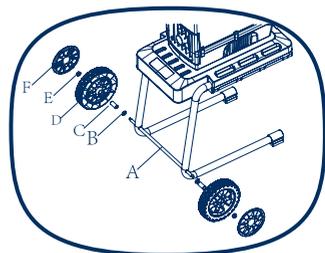



ASSEMBLY

- v. Insert the Allen wrench into wheel shaft to hold the shat, and use the supplied hex wrench to fix the wheels tightly.
- vi. Finally, place the wheel cover (G) in the center of the wheel.

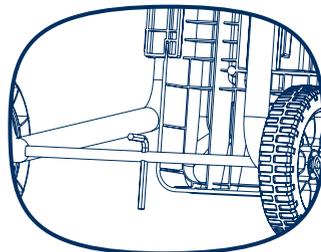


3 Install collection box

- i. Press down the lock button (A) and then insert the collection box into the undercarriage.

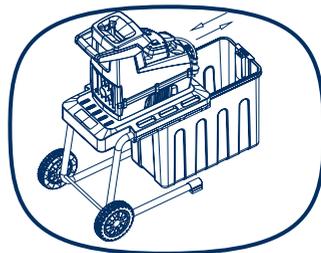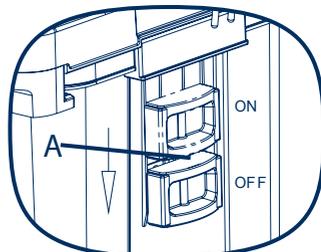

- ii. Press the lock button upward.

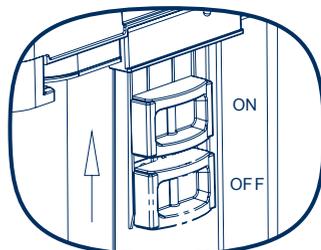


OPERATION

General operation

- i. Check the product, its power cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
- ii. Double check that accessories and collection box are properly fixed.
- iii. Always hold the product by its handles. Keep the handles dry to ensure safe support.

To start and stop

- i. Press the Forward/Reverse switch (A) to I position.
- ii. Press the On/Off switch (B) to ON (I) position to start the motor.
- iii. Press the On/Off switch (B) to OFF (O) position to stop the motor.

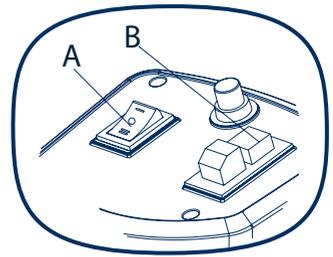

CAUTION: Damage to the machine due to improper operation and/or incorrect handling can result in machine damage.

Only feed materials to be shredded after the machine is switched on. Do not feed materials to be shredded after the machine is switched off.



NOTE: The machine is equipped with a safety switch to prevent it from being switched on again accidentally after a power failure.


For safety reasons, the shredder will not operate without a correctly attached collection box.

Overload protection

This machine is equipped with an overload protection system. To protect the motor from being damaged, the safety switch will automatically switch off the power, when the motor is overloaded.

Wait at least 1 minute before restarting by first pressing the safety switch (A) and then the On/Off switch. If the motor does not restart, do the following:

- i. Press the safety switch (A).
- ii. Press the Forward/Reverse Button (B) to REVERSE II position.
- iii. Press and hold the On/Off switch to ON(I) position to remove any objects that could obstruct the blades.

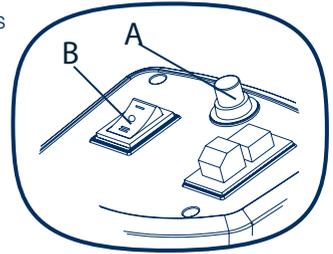

Tips

- Be sure to observe the safety instructions.
- Always wear work gloves, goggles and ear protection.
- Fill the material you want to shred at the funnel on the side with the larger opening
- The material is drawn into the shredder automatically.



CAUTION! Long pieces of material projecting out of the funnel inlet may whiplash when it is drawn in – keep a safe distance between yourself and the machine.

- Judge the quantity of material which you put into the funnel inlet so that the funnel does not get blocked.

OPERATION

- If you want to shred withered, damp material that has been lying in the garden for several days, alternate between putting in this material and branches. This will help to prevent the loading funnel becoming clogged with material.
- Do not shred soft waste (e.g. kitchen waste) – put it straight in the compost box.
- Entangled branches and leaves should be thoroughly shredded before loading any more material.
- Do not allow the discharge opening to become clogged with shredded material – risk of pile-ups.
- Do not cover the ventilation slits.
- Do not place heavy material or thick branches into the machine continuously. This may cause the blade to jam.
- Ensure tool is switched off and disconnected from the power supply before using a plunger or hook to remove jammed objects from the funnel or discharge openings.




Important: The material will be crushed, mashed and shredded by the cutting unit, thus accelerating the decomposition process for composting.

Emptying the shredded material debris box

The level of material in the shredded material debris box can be checked by looking through the slots on the side of the cover.


Always empty the shredded material debris box in good time to prevent it from over filling.

- i. Switch off the device at the ON/OFF switch.
- ii. Release the shredded material debris box. To do so, press the safety switch down.

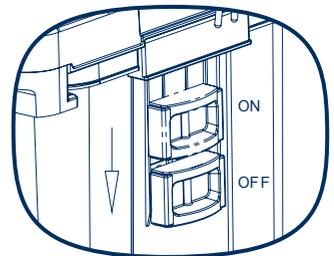

OPERATION


iii. Take the shredded material debris box out at the front.

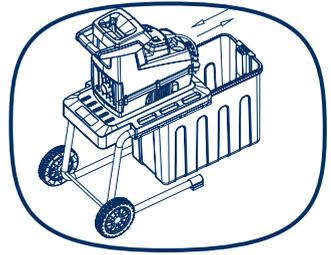

MAINTENANCE

Adjusting the counter blade

There is an adjustment device on the right-hand side of the plastic housing for this purpose. Turn the knob (C) clockwise so that the screw moves towards the shredding blade. After a half turn the counter blade will have moved 0.50 mm closer to the shredding blade. After completing this adjustment check whether the blade produces the desired results.

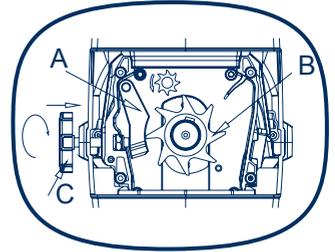

IMPORTANT: If the shredding blade touches the counter blade, it will cut it and small metal chips may fall out of the discharge opening. This is not a fault, but it must only be adjusted as much as necessary since otherwise the counter blade will suffer premature wear.

When the counter blade cannot be adjusted any more, it has reached its wear limits and must be replaced.


MAINTENANCE

Replace counter blade



Important! Wear work gloves! Switch off the equipment and pull out the power plug.

- i. Release and remove the shredded material debris box.
- ii. Undo the knob for setting the counter blade by approx. 5 turns.

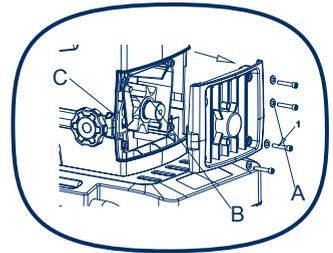

- iii. Undo the 4 Allen screws (A) fully.
- iv. Now you can take off the cover.
- v. Only use original blades from the manufacturer available via the website below.
- vi. Finally, you must reset the counter blade as described above.


UK plug

If you need to replace the fitted plug, then this must be replaced using a BS1363/A Mains plug fitted with a BS1362 approved fuse of identical value to the original fuse. Proceed as follows:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral, Brown – Live In case the colours of the wires in the mains lead don't match the colour marking on the terminals, please proceed as follow.

Connect the blue wire to the terminal marked N (Neutral) or coloured black. The brown wire must be connected to the terminal marked L or coloured red.

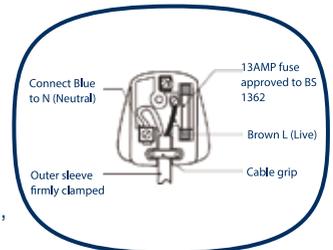

MAINTENANCE

Storage

- i. Store the product and its accessories in a dry, frost-free place.
 - ii. Always store the product in a place that is inaccessible to children.
The ideal storage temperature is between 10 and 30°C.
-
-

Transportation

- i. Switch the product off and disconnect from power supply before transporting it anywhere.
 - ii. Protect the product against scratching and secure it to avoid damage from impact.
-
-

After use

- i. Switch the product off, disconnect it from the power supply and let it cool down.
 - ii. Check, clean and store the product as described below.
-
-

Recycling and disposal

- i. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.
- ii. The product comes in a packaging that protects it against transportation damage. Keep hold of the packaging until you are sure that all the parts have been delivered and the product is functioning properly. Recycle the packaging afterwards.



TECHNICAL DATA

Model	SS2800
Nominal voltage	230-240V~,50Hz
Input power	2800W (S6 40%)
No load speed	60 /min
Max. Cutting Dia	44 mm
Protection Class	II
Protection degree	IP24
Net weight	19.4 kg

A weighted sound pressure 79.1dB(A) K_{PA} : 3dB(A)

A weighted sound power 91.7dB(A) KWA: 2.67dB(A)

The guaranteed sound power level: 94dB(A)

Wear ear protection

The sound values have been determined according to noise test code given in EN 50434:2014, using the basic standards EN ISO 11094 and EN ISO 3744.

The sound intensity level for the operator may exceed 80dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 50434:20147) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.

WARNING! Depending on the actual use of the product the vibration values can differ from the declared total! Adopt proper measures to protect yourself against vibration exposures! Take the whole work process including times the product is running under no load or switched off into consideration!

Proper measures include among others regular maintenance and care of the product and cutting attachments, keeping hands warm, periodical breaks and proper planning of work processes!

TECHNICAL DATA

PART NUMBER	ACCESSORIES
8031-60000501	Wheel
8151-660002	Collection box
8132-660001	Counter blade
8160-660001	Shedding blade

Parts can be ordered via www.gardenservicecentre.co.uk

TROUBLESHOOTING

Suspected malfunctions are often due to causes that the user can fix themselves.

Therefore, check the product using this section. In most cases the problem can be solved quickly.

WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Gloves and appropriate protective clothing must be worn when performing these instructions.

Fault	Possible Cause	Solution
The motor does not run	<ul style="list-style-type: none">- Safety switch- Power failure	<ul style="list-style-type: none">- Check if the switch still functions well. Check if the collection box are well assembled and the lock button is "on" position. <ul style="list-style-type: none">- Check the power supply cable, the plug and the house fuse.
The material to be chopped is not drawn in	<ul style="list-style-type: none">- The material is jammed in the feeding funnel- Shredding material is too soft	<ul style="list-style-type: none">- Switch the shredder OFF. Pull the material from the feed funnel. Switch the shredder back ON and re-feed thick branches such that the blade dose not immediately engage the pre-cut notches again. <ul style="list-style-type: none">- Insert wood or shred dried branches.- Press the reset button and then the On/Off switch. If it still does not start, take the steps indicated on page 15' 'Overload Protection' section.

WARRANTY

If your device develops a fault, please don't hesitate to contact our customer service department on 01904 727505, we can solve 80% of problems via the phone.

1. These warranty terms cover additional warranty rights and do not affect your statutory warranty rights. All our products are covered by a two year manufacturer warranty unless this product was registered within 28 days of purchase via www.spearandjackson-power.com and therefore obtained an additional 12 month warranty.
2. Claims must be accompanied by proof of purchase. This must be in the form of a sales receipt or bank statement and must show that the product has been purchased within the warranty period as described under point 1, from the retailer that it was originally bought from. Please keep your receipt safe or staple it to the back of this manual for future reference.
3. Our warranty covers problems caused by material or manufacturing defects, and will result in the repair of these defects or replacement of the device with a like for like or similar article.
4. Our devices have not been designed for commercial, trade or industrial applications, any signs of use of the equipment in these application or equivalent activities, invalidates the warranty.
5. The following are also excluded from our warranty:
 - A. Faults due to accidents, customer misuse or unauthorized repairs
 - B. Consumable Parts such as counter blade, push stick, handles, knobs, extension cable and other accessories that are compatible with the product.
 - C. Failure due to lack of routine maintenance.
 - D. Failure as a result of not using the equipment in accordance with the manual and safety instructions
 - E. The adjustment of cables, drives gear or switches.

Warranty claims should be submitted before the end of the warranty period, see point 1, but a paid service exists for repairs commissioned after this period. The original warranty period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the warranty period, and no new warranty will become active for the work performed or parts fitted.

If you have any problems or questions concerning your garden power tool, please contact our after sales service at 01904 727505 or visit www.spearandjackson-power.com.

This device may be re-conditioned, like for like or upgraded replacement.

EC DECLARATION OF CONFORMITY

We

SUMEC UK Co.,Ltd.
Unit A&B Escrick Business Park
Escrick, York YO19 6FD

Declare that the product

Electric silent shredder
Certification No: GY6610
Model No: SS2800
Function: Shredding branches
Serial number: S-EO00001~S-EX99999

Complies with the following directives:

Machinery Directive 2006/42/EC
EMC Directive 2014/30/EU
ROHS Directive 2011/65/EU
WEEE Directive:2012/19/EU
Noise directive :2000/14/EC

Standards conform to:

EN 60335-1: 2012/A11:2014
EN 50434: 2014
EN 62233: 2008
EN 55014-1: 2006/A2:2011
EN 55014-2: 2015
EN 61000-3-2:2014
EN 61000-3-11:2000

We additionally conform the following in accordance with the 2000/14/EC emissions guideline:

Conformity Assessment Procedure as Per AnnexVI,
Measured sound pressure level L_{pA} : 79.1dB(A), $K=3$ dB(A)
Measured sound power level L_{wA} : 91.7dB(A), $K=2.67$ dB(A)
Guaranteed sound power level L_{wA} :94dB(A)

Authorized Signatory
Date: 27-02-2017

Signature: M. Hall

Name:
General Manager
Sumec UK Co., Ltd.

