



User Manual

Spend a little Live a lot





43cm ELECTRIC LAWNMOWER







GLEM43



Contents

- Product images and parts list3**
- General information.....7**
 - Reading and storing the instruction manual.....7
 - Explanation of symbols.....7
- Safety.....10**
 - Proper use.....10
 - Safety notes.....10
- Assembly.....18**
 - Installation.....18
 - Remove the packaging.....18
 - Fix the cable retain relief.....18
 - Handle assembly19
 - Fix the cable.....19
 - Assemble the grass bag.....19
 - Connection to the power supply.....19
- Operation.....20**
 - General operation20
 - Setting cutting height20
 - Connection to the power supply.....21
 - Switching on.....21
 - Switching off21
 - Mowing direction.....21
 - Grass bag full indicator.....21
- Cleaning.....22**
- Maintenance.....23**
- Troubleshooting.....25**
- Storage.....27**
- Disposal.....28**
- Technical data.....29**
- EC Declaration of Conformity**
- Warranty**
 - Warranty Card
 - Warranty Conditions

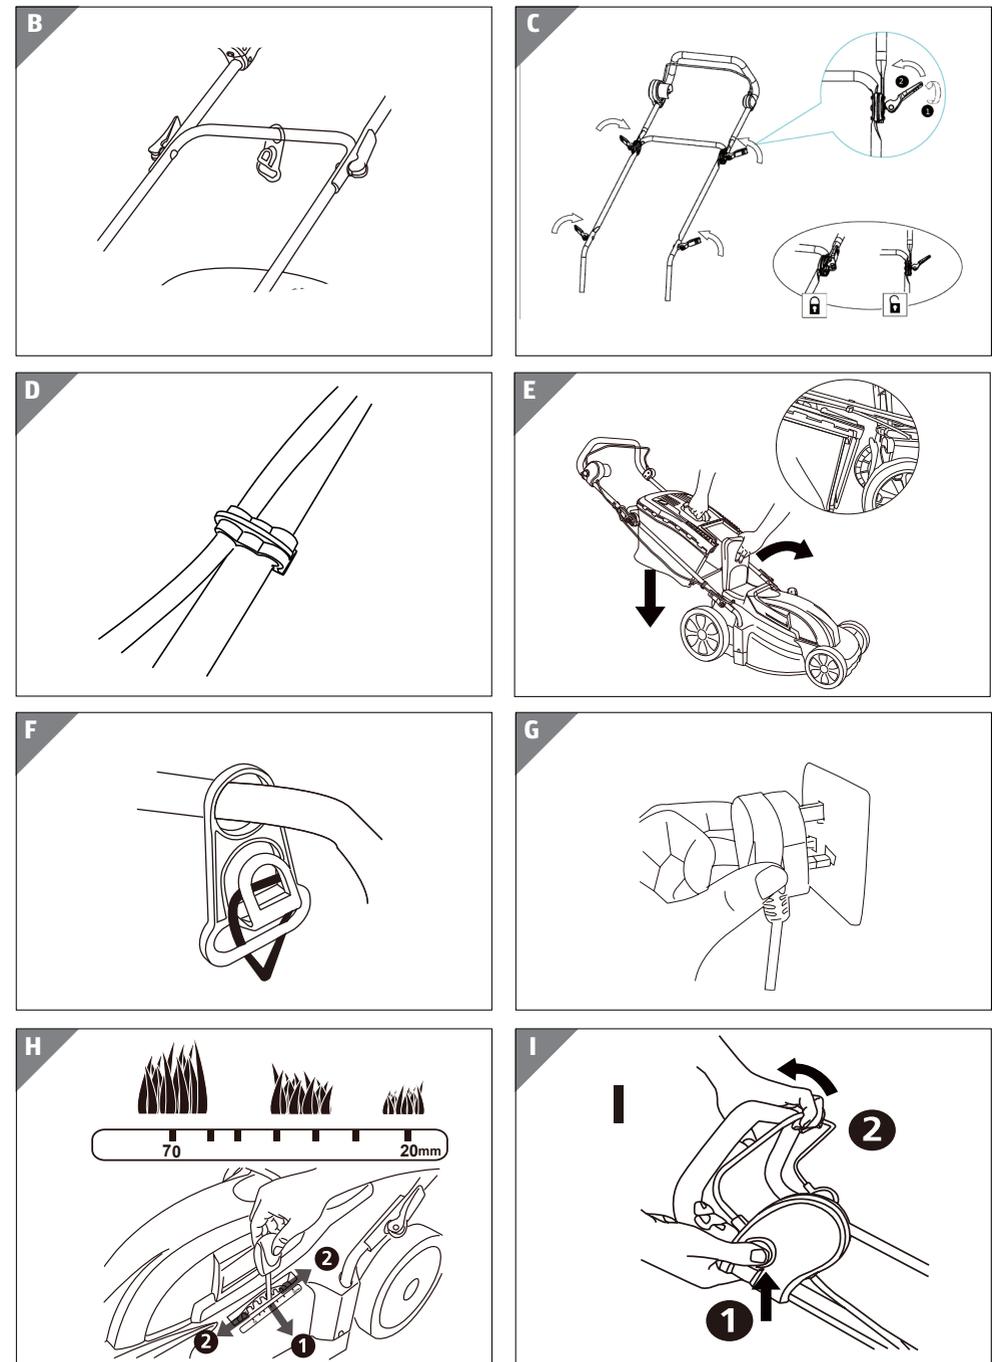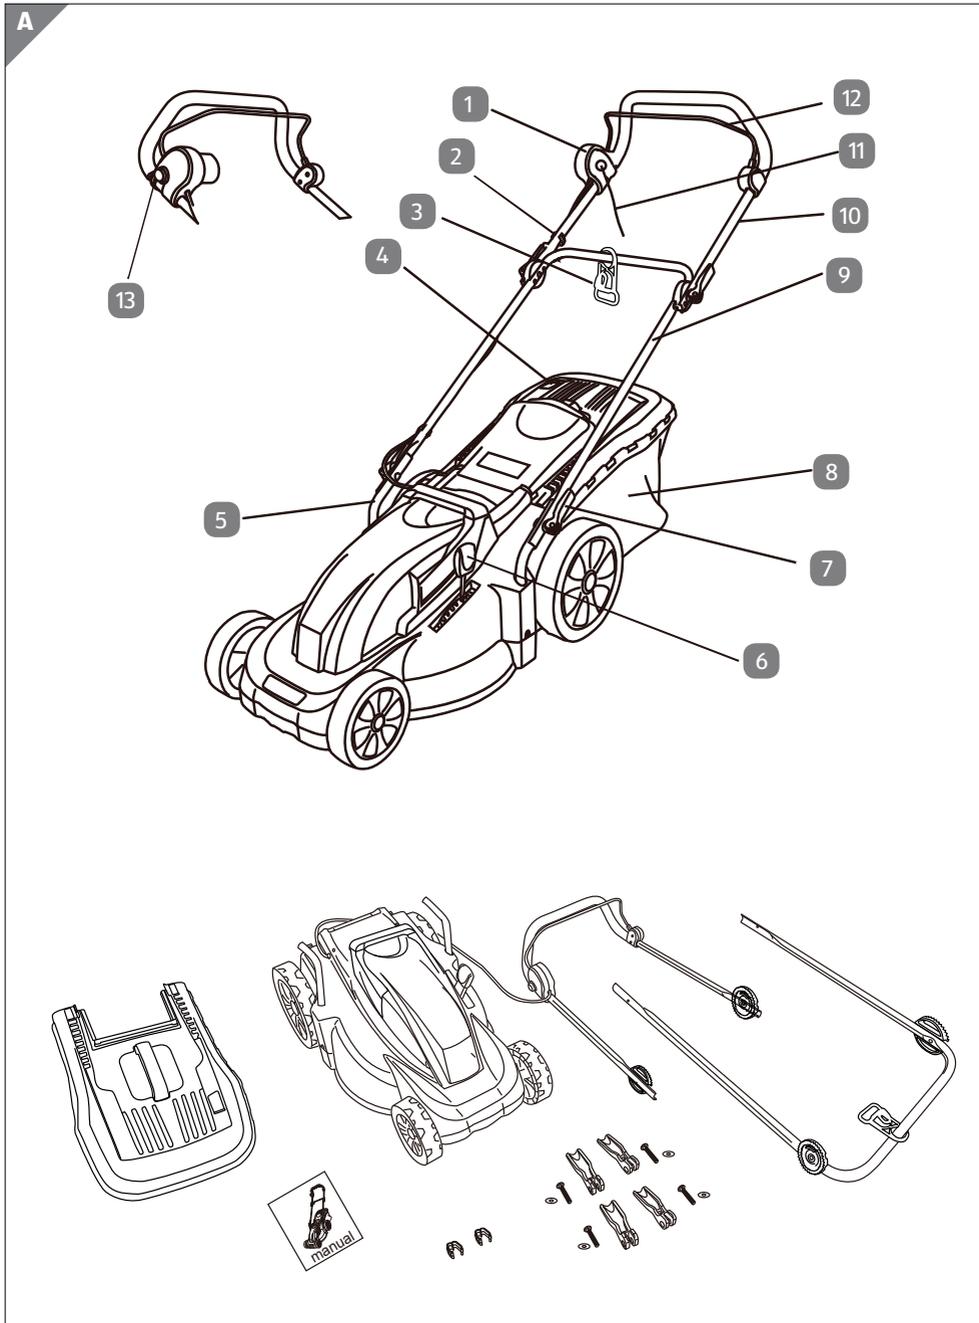

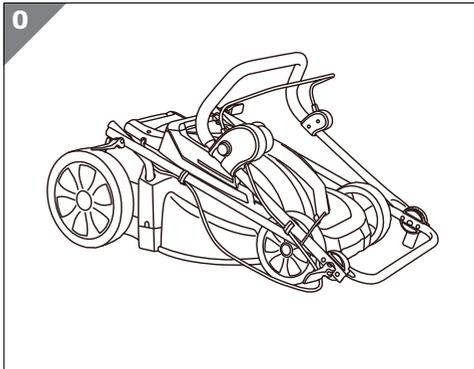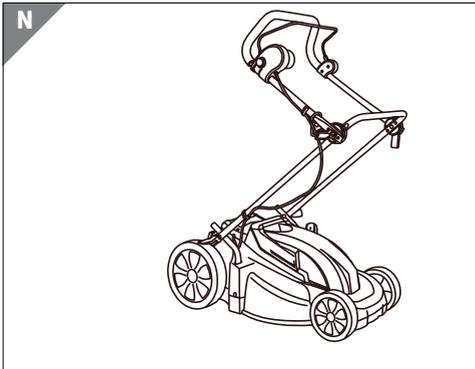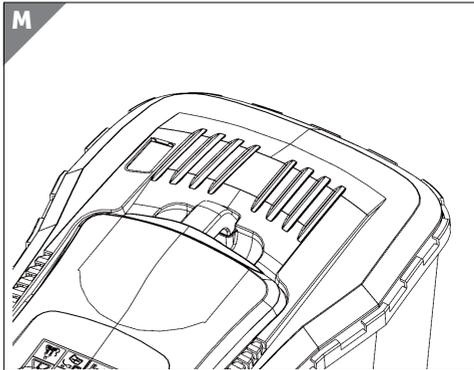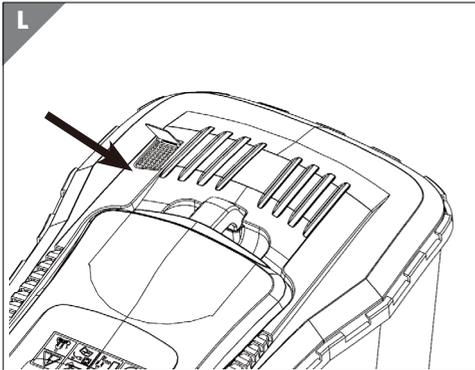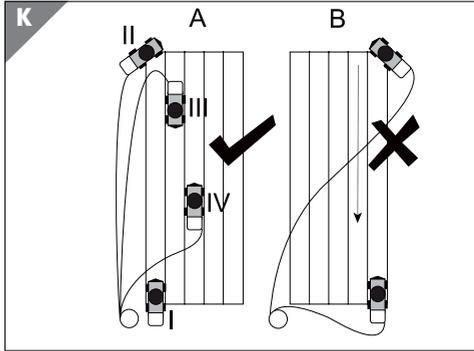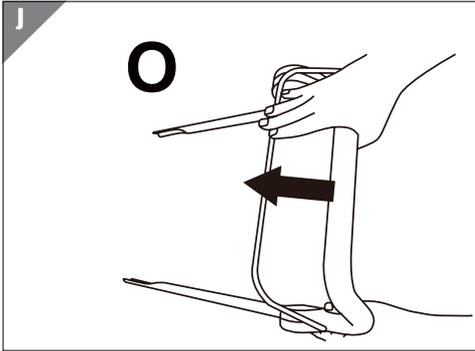

- 1 Switch box
- 2 Cable click
- 3 Cable retain relief
- 4 Full grass indicator
- 5 Lower handle
- 6 Height adjusting handle
- 7 Quick release lock
- 8 Grass bag
- 9 Middle handle
- 10 Upper handle
- 11 Cable
- 12 Switch bar
- 13 Lock-off button

Reading and storing the instruction manual



This instruction manual accompanies this lawnmower. It contains important information on start-up and handling. Before using the lawnmower, read the instruction manual carefully. This particularly applies for the safety notes. Failure to ahead **this** instruction manual may result in severe injury or damage to the lawnmower. The instruction manual is based on the standards and rules in force in the European Union. Store the instruction manual for future use. If you pass the lawnmower on to third parties, please ensure to include this instruction manual.

You can request an electronic version of these instructions from our customer service.

Explanation of symbols

The following symbols and signal words are used in this instruction manual, on the lawnmower or on the packaging.



Before any use, refer to the corresponding paragraph in the present manual.



This symbol, before a safety comment, indicates a precaution, a warning or a danger. Ignoring this warning can lead to an accident for yourself or for others. To limit the risk of injury, fire, or electrocution always apply the recommendations indicated.

AFTER SALES SUPPORT



Wear hearing protection



Wear eye protection



Wear protective gloves



Do not expose and operate the tool in rain.



Remove the plug from the mains immediately if cable is damaged or cut.



Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.



Beware of sharp blades. Remove plug from mains before maintenance or if cord is damaged.

AFTER SALES SUPPORT





Cutting device continues to rotate after the product is switched off. Wait until all components have completely stopped before touching the lawn mower.



Double insulation.



Keep the mains power cord away from cutting area.



Guaranteed sound power level value in 96 dB



The product complies with the applicable European directives and an evaluation method of conformity for these directives was **done**.



Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.



Proper use

The lawnmower is designed exclusively for cutting grass. The manufacturer cannot be held liable for damage caused by improper or incorrect usage.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for the equivalent purposes.

Safety notes



WARNING!

When using electric tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

General safety

- Keep this instruction manual in a safe place for future reference.
- Read the instructions carefully. Be familiar with the controls and the proper use of the equipment.
- Never allow children or people unfamiliar with these instructions to use the **pressure washer**. **Local regulations can restrict the age of the operator.**
- **Never use the machine while people, especially children, or pets are nearby.** Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Don't use the appliance without reading the instruction sheet.
- Children should be supervised to ensure that they do not play with the appliance.

Work area safety

- Keep the work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying,

AFTER SALES SUPPORT



- pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. **Use of a cord suitable for outdoor use** reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) **protected supply**. Use of an RCD reduces the risk of electric shock. The maximum operating current of the RCD must be less than 30mA.
- The voltage indicated on the rating plate must correspond to the voltage of the power source.
- Only use or replace power supply cables for this unit which correspond to the types indicated by the manufacturer. **See the operating instructions for the order no. and types.**
- Never touch the mains plug with wet hands.
- Do not run over, crush or pull the power supply cable or extension lead, **otherwise it may be damaged**. Protect the cable from heat, oil and sharp edges.
- The extension lead must have a cross section in accordance with the operating instructions and be protected against splashed water. **The connection must not be in water.**

Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and more safely when operated at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or the

AFTER SALES SUPPORT



battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

- Store idle power tools out of **the reach of children** and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating the machine. Do not use the machine while you are tired or under the influence of drugs, alcohol or medication.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes
- Stay alert, watch what you are doing and use common sense when operating the machine. Do not use the machine

AFTER SALES SUPPORT



while you are tired or under the influence of drugs, alcohol or medication.

- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the **off** -position before connecting to power source and/or battery pack, picking up or carrying the tool.
- Do not carry the machine with your finger on the switch.
- Remove any adjusting key or wrench before turning the machine on. A wrench or a key left attached to a rotating part of the machine may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving **parts**. **Loose clothes, jewellery or long hair can be caught in moving parts.**
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- **Warning!** Switch off, remove plug from mains **before** adjusting, cleaning or if cable is cut, damaged or entangled.
- The blades continue to rotate for a few seconds after the machine is switched off.
- The machine is double insulated for safety and **requires** no earth connection.
- The operating voltage is 230V AC, 50Hz (for non-EU countries 220V, 240V as applicable). If you want to use an extension cable when operating your product, only the **following** cable dimensions should be used:
 - 1.0mm²: max. length 40m

AFTER SALES SUPPORT



- 1.5 mm²: max. length 60m
- 2.5 mm²: max. length 100m
- **Note:** If an extension cable is used it must be earthed and connected through the plug to the earth cable of your supply network in accordance with prescribed safety regulations.
- If in doubt contact a qualified electrician or the **nearest Cobra Service Centre.**
- **WARNING!** Inadequate extension cables can be dangerous. Extension cable, plug and socket must be of watertight construction and intended for outdoor use.
- It is recommended for increased electrical safety to use a Residual Current Device (RCD) with a tripping current of not more than 30mA. Always check your RCD every time you use it.

Operational safety

Training

- Read the instructions carefully. Be familiar with the controls and the proper use of the product.
- Never allow people unfamiliar with these instructions or children to use the product. Local regulations can restrict the age of the operator.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

- Never operate the product while people, especially children, or pets are nearby.
- Wear eye, ear and mouth protection at all times while operating the product

AFTER SALES SUPPORT



Operation

- Use the product only in daylight or good artificial light.
- Never operate the product with damaged guards or shields or without guards or shields in place.
- Keep hands and feet away from the cutting attachment at all times and especially when switching on the motor.
- Before use check the controls and correct operation of the product.
- Before using the product or after any impact, check for signs of wear or damage and repair as necessary.
- Always disconnect the product from the power supply (i.e. remove the plug from the power supply or the battery pack)
 - whenever leaving the product unattended;
 - before clearing a blockage;
 - before checking, cleaning or working on the product
 - after striking a foreign object;
 - whenever the product starts vibrating abnormally.
- Take care against injury to feet and hands from the cutting attachment.
- Always ensure that the air vents are kept clear of debris.
- Never use replacement parts or accessories not provided or recommended by the manufacturer.
- The product should be supplied via a residual current device (RCD) with a tripping current of not more than 30 mA.
- Avoid using the product in bad weather conditions especially when there is a risk of lightning.
- Position the cord so that it will not be caught by the cutting attachment during operation.
- Disconnect from the power supply when the cord becomes damaged or tangled.
- If the cord becomes damaged during use, disconnect the cord from the supply immediately. DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.
- Do not use the product if the cord is damaged or worn.
- **Warning!** The cutting element  continue to move after the product is switched off.
- Keep the extension cord away from the blades at all times.
- Only use an extension cord with conductors of not less than

AFTER SALES SUPPORT



1.5mm² or 2.0mm² and:

- if rubber insulated, ordinary tough rubber sheathed flexible cord (code designation 60245 IEC 53);
 - if polyvinyl chloride insulated, ordinary polyvinyl chloride sheathed flexible cord (code designation 60227 IEC 53).
- Do not expose the product to rain. Instructions is considered unauthorized use and relieves the manufacturer from his or her legal liability.

**WARNING!****ENVIRONMENTAL PROTECTION**

Dispose of soiled maintenance material and operating material at the appropriate collection point. Recycle packaging material, metal and plastics.

Assembly**Installation**

Always take care when removing the packaging to prevent damage to you or to the lawnmower.

Before assembling the lawnmower, check all the parts indicated in the manual are in the box. Inspect all the parts for signs of damage. Do not assemble the lawnmower if you observe any damaged components.

Remove the packaging

1. Remove all parts of the lawnmower from the box and carefully remove all packaging. Take care not to lose any instructions which may be attached to the parts. These provide important information which will be required while assembling the lawnmower.
2. Keep all packaging until the lawnmower is fully assembled and has been operated successfully.

Note! Always recycle the packaging in accordance with local recycling schemes. This item requires a two person lift to remove from the packaging.

Make sure that you have sufficient space to put the lawn mower down. Keep your feet apart so that you have a stable position, bend at the knees and keep your back straight.

Fix the cable retain relief (see Fig B)

1. Lead the middle handle through the hole in the cable retain relief, and hook on it.



Handle assembly (see Fig C)

1. Fit the upper handle, middle handle and lower handle together with the quick release lock system. You can rotate release lock to adjust the tightness of lock.

Fix the cable (see Fig D)

1. Ensure that the cables clips supplied are used to fix the cable to the handle.

Assemble the grass bag (see Fig E)

1. Insert the grass bag handle in the upper cover of grass bag.
2. Place the metal frame inside the grass collection bag. Make sure that these clips are fully secured to the metal frame.
3. Hang the collection bag on the hook.

Connection to the power supply

1. Double the extension cord, about a foot from the end. Hook the loop over the cord strain. (see Fig F)
2. Connect the plug to the main socket. (see Fig G)



Operation

General operation

- Check the product, its power cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
- Double check that accessories or cutting device are properly fixed.
- Always hold the product by its handles. Keep the handles dry to ensure safe support.
- Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
- Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before putting it down.
- Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.

NOTE! Only operate the product at reasonable hours - not early in the morning, late at night or on weekends/public holidays when people might be disturbed. Inform yourself about local restrictions.



Setting cutting height (see Fig H)

1. Push the adjusting lever in order to make it out of the tooth
2. Push the lever at the required Position (1 to 7)



**WARNING!**

Never operate the adjusting handle roughly.

Connection to the power supply

1. Connect the extension cord to the switch box and connect the plug to the main socket. If operating the appliance in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

Switching on (see Fig I)

1. Press the button (1).
2. Pull the switch bar (2) towards the handle and hold in position.

Switching off (see Fig J)

1. Release the switch bar.

Mowing direction (see Fig K)

1. When you begin to mow please follow the arrow, so that you can avoid **twist** your extension cord or cut the cord.

Grass bag full indicator

1. If the collection bag is empty or it is not full with grass, the grass full indicator will open. (see Fig L)
2. If the collection bag is full with grass the grass full indicator will close. (see Fig M)



Cleaning

NOTE! Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. Remove stubborn dirt with high pressure air (max. 3 bar).
3. Before and after each use, check the product and accessories (or attachments) for wear and damage. Check for worn or damaged parts. Replace worn parts as necessary or contact an authorised service centre for repair before using the product again. Observe the technical requirements.



Maintenance



WARNING!

Always switch the product off, disconnect it from the power supply and let the product cool down before performing inspection, maintenance and cleaning work!

Do not spray the unit with water. Ingress of water may destroy the switch/plug combination unit and the electric motor.

Clean the unit with a cloth, hand brush, etc.

Always wear gardening gloves when handling or working near the sharp blades. 

Keep all nuts, bolts and screws tight to be sure that the machine is in safe working condition.

Check the grass catcher frequently for wear or deterioration.

Examine the machine and replace worn or damaged parts for safety.

Check for any damage and wear. Repair damages in accordance with this instruction manual or take it to an authorised service centre before using the product again.



Repair

This product does not contain any parts that can be repaired by the consumer. Contact **an authorised service centre** or a similarly qualified person to have it checked and repaired.

Power cord

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a safety hazard.



Troubleshooting

Suspected malfunctions are often due to causes that the user can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.



WARNING!

Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!



Problem	Possible cause	Solution
Do not start	Not connected to power supply	Connect to power supply
	Defective power cord or plug	Check by a specialist electrician
	Other electrical defect to the product	Check by a specialist electrician
	Lock-off button not pressed	Press the lock-off button first, then the brake bar
Do not reach full power	Not suitable extension cord	Use a proper extension cord
	Power source with too low voltage	Connect to another power source



Unsatisfactory result	Cutting device is dull/damaged	Replace with a new cutting device
	Material exceeds cutting capacity	Only cut materials according to capacity of the product
	Cutting height is incorrect	Adjust cutting height
Excessive vibration or noise	Cutting device is dull/damaged	Replace with a new cutting device
	Bolts/nuts are loose	Tighten bolts/nuts



Storage (see Fig N and Fig O)

1. Switch the product off and disconnect from power supply.
2. Clean the product as described above.
3. To reduce storage space, the upper handle can be folded down, unscrew the wing nuts by approximately 6 revolutions.
4. We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

Waste disposal

The equipment and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste. Ask your dealer or your local council.

Disposal

Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of old devices



Old devices must not be disposed of with household waste!

If the lawnmower can no longer be used, every user is required by law to dispose of old devices separately from their household waste, e.g. at a collection point in his community/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.



Technical data

Rated voltage	230-240 V~
Rated frequency	50 Hz
Rated power input	1800 W
Rated no load speed	3500 min ⁻¹
Cutting width	430 mm
Cutting height (Adjustments: 7)	20 / 29 / 38 / 47 / 56 / 65 / 75 mm
Grass catcher volume	63 l
Protection degree	IPX4
Weight	21 kg

Sound values

Sound pressure level L_{pA}	73.4 dB(A)
Uncertainty K_{pA}	2.5 dB(A)
Sound power level $L_{WA,d}$	93 dB(A)
Uncertainty K_{WA}	3 dB(A)

SUMEC

Declaration of CE Conformity

We
SUMEC Hardware & Tools Co., Ltd.
 1 Xinghuo RD., Nanjing, China
 And our branch office
SUMEC UK Co., Ltd.
 Unit A&B, Escrick Business Park
 Escrick, York YO 19 6FD
 Declare that the product
 Electric lawnmower
 Model No: SLM 43KZC
 Function: Cutting grass
 Serial number: 00001-09479

Complies with the following directives:

Machinery Directive: 2006/42/EC
Noise Directive: 2000/14/EC
RoHS Directive: 2011/65/EU
WEEE Directive 2012/19/EU

Standards conform to:

EN60335-1:2012+A11: 2014
EN60335-2-77:2010 EN62233:2008

We additionally confirm the following in accordance with the
 2000/14/EC emissions guideline:

Conformity Assessment Procedure as Per AnnexVI,
Measured sound pressure level L_{pA} : 73.4dB(A), k=2.5dB(A)
Measured sound power level L_{WA} : 92.1dB(A), K=3dB(A)
Guaranteed sound power level L_{WA} : 96dB(A)

Authorized Signatory

Date: 2015-11-30

Signature: 
 Name: Liu Kai

General Manager
 SUMEC Hardware & Tools Co., Ltd.



GARDENLINE®

WARRANTY CARD**43cm ELECTRIC LAWNMOWER GLEM43**

Your detail:

Name _____

Address _____

_____

E-Mail _____

Date of purchase * _____

* We recommend you keep the receipt with this warranty card.

Location of purchase _____

Description of malfunction :



Return your completed warranty card together with the faulty product to:

Unit A&B
Escrick Business Park
Escrick
York
YO19 6FDEmail: support@coreservice.co.uk
Tel: 01904 727501**AFTER SALES SUPPORT** GB +44 (0)1904 727501 www.coreservice.co.uk
IRE +353 (0)1 902 2605

MODEL: GLEM43, 04/2016, 69432

Phone lines available
Mon - Fri : 9am - 5pm
Sat - Sun: 11am - 4pm.
Calls are charged at local rate,
mobiles may vary**3**
YEARS WARRANTY**Warranty conditions**

Dear Customer,

The **ALDI warranty** offers you extensive benefits compared to the statutory obligation arising from a warranty:**Warranty period:** 3 years from date of purchase
6 months for wear parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries).**Costs:** Free repair/exchange or refund.
No transport costs.**Hotline:** Support line charged at local rate**ADVICE:** Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.**In order to make a claim under the warranty, please send us:**

- Together with the faulty item the original receipt and the warranty card properly completed.
- The faulty product with all components included in the packaging.

The warranty does not cover damage cause by:

- **Accident or unanticipated events.** (e.g. lighting, water, fire)
- **Improper use or Transport.**
- **Disregard of the safety and maintenance instructions.**
- Other **improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not limit the statutory obligation of the seller arising from a warranty. In the event that a product is received for repair, neither the service company nor the seller will assume any liability for data or settings possibly stored on the product by the customer.



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



Importer:
SUMEC UK
UNIT A&B ESCRICK BUSINESS PARK
ESCRICK, YORK, YO19 6FD, UK
Email: support@coreservice.co.uk

AFTER SALES SUPPORT



+44 (0)1904 72



+353 (0)1 902



www.coreservice.co.uk

MODEL: GLEM43, 04/2016, 69432

3

YEARS WARRANTY